



Amp'ed RF Technology, Co., Ltd.


www.ampedrftech.com

1. Power and Communication

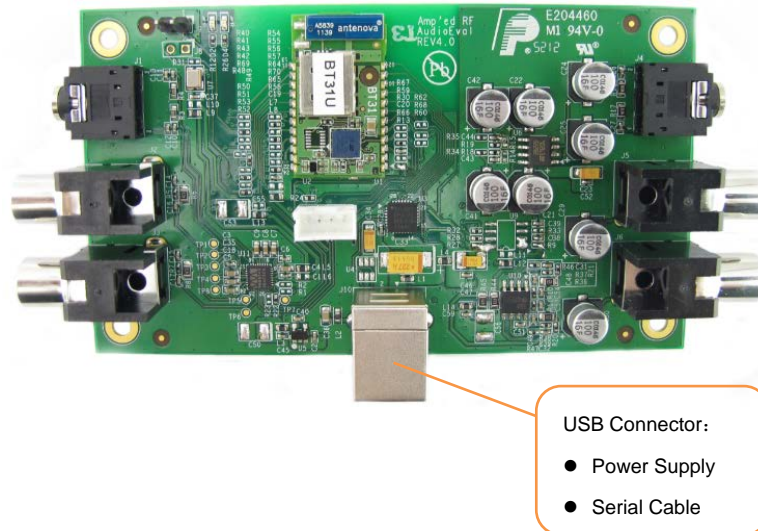



2. Check and Load the Firmware Version


- Open Amp'ed RF Firmware evaluation tool 
- Click the “connect” button to establish a COM session
- Type “at+ab reset”, and hit the Enter Key
- Type “at+ab build” to get the firmware version of the Bluetooth module

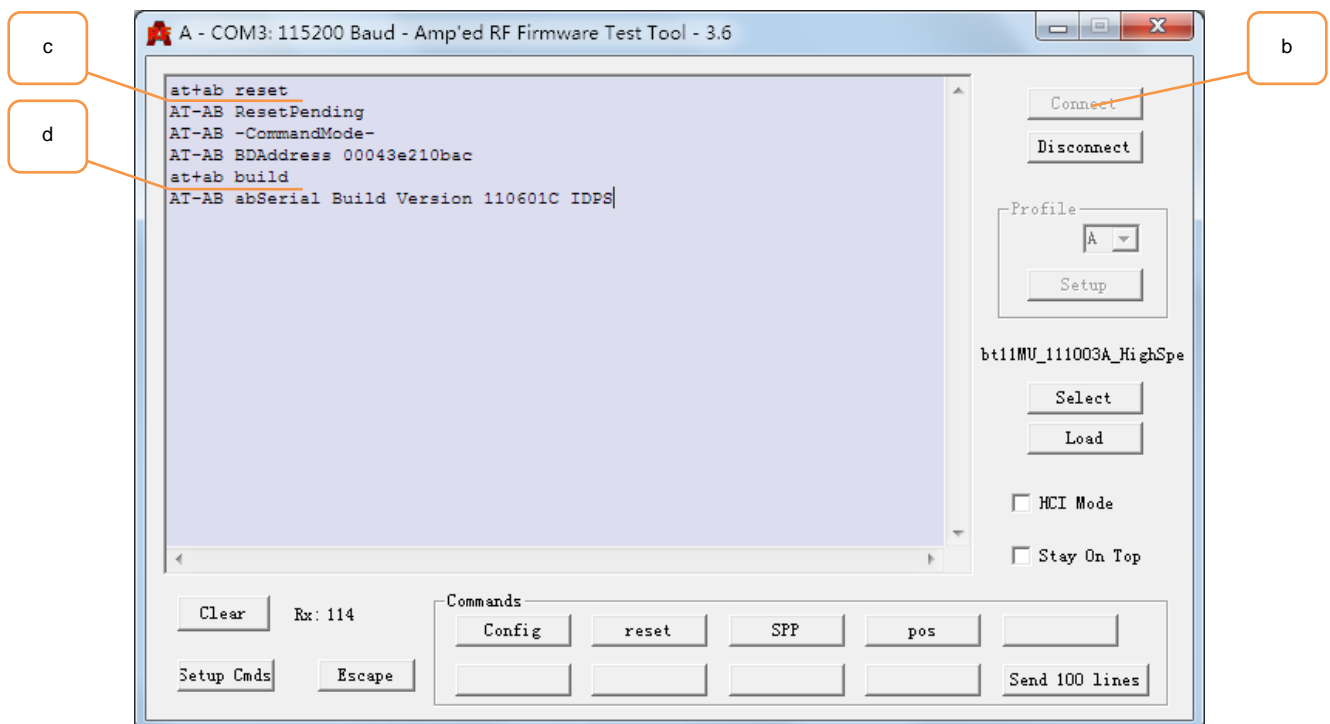


3. Loading Firmware

- Type "at+ab reset"
- Type "at+ab invalidateapplication"
- Click the "select" button to select the desired firmware "bt31_A2DP_HSE_8M_111204A.bin"
- Click "load" button

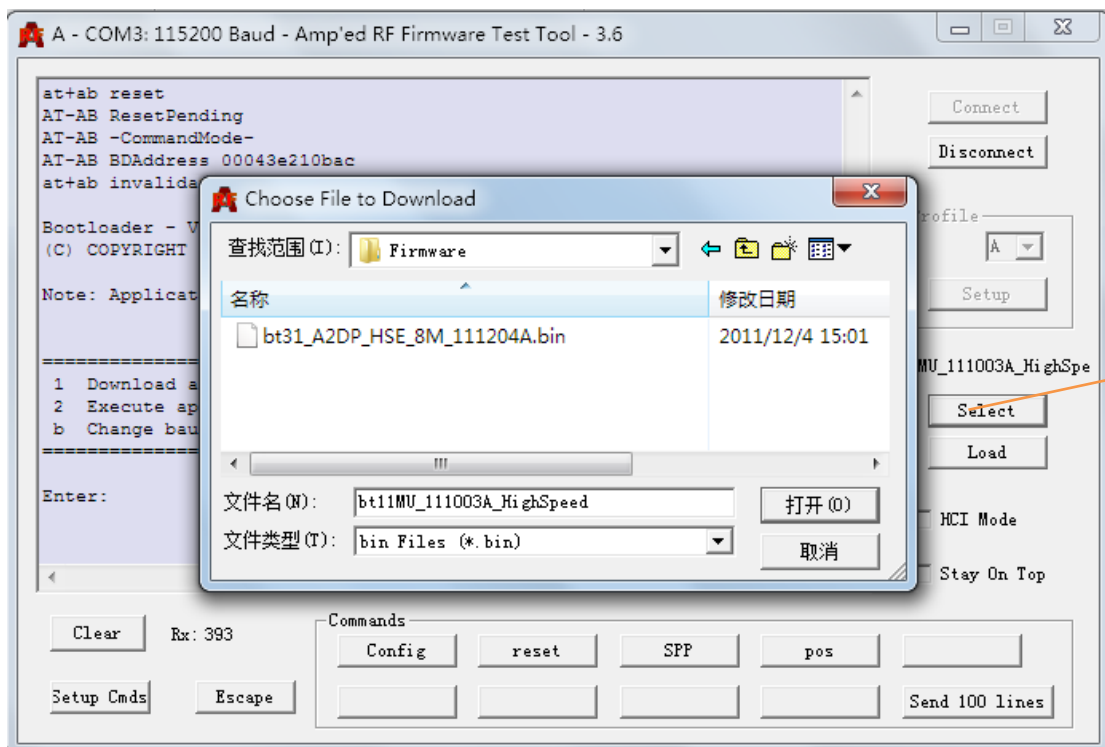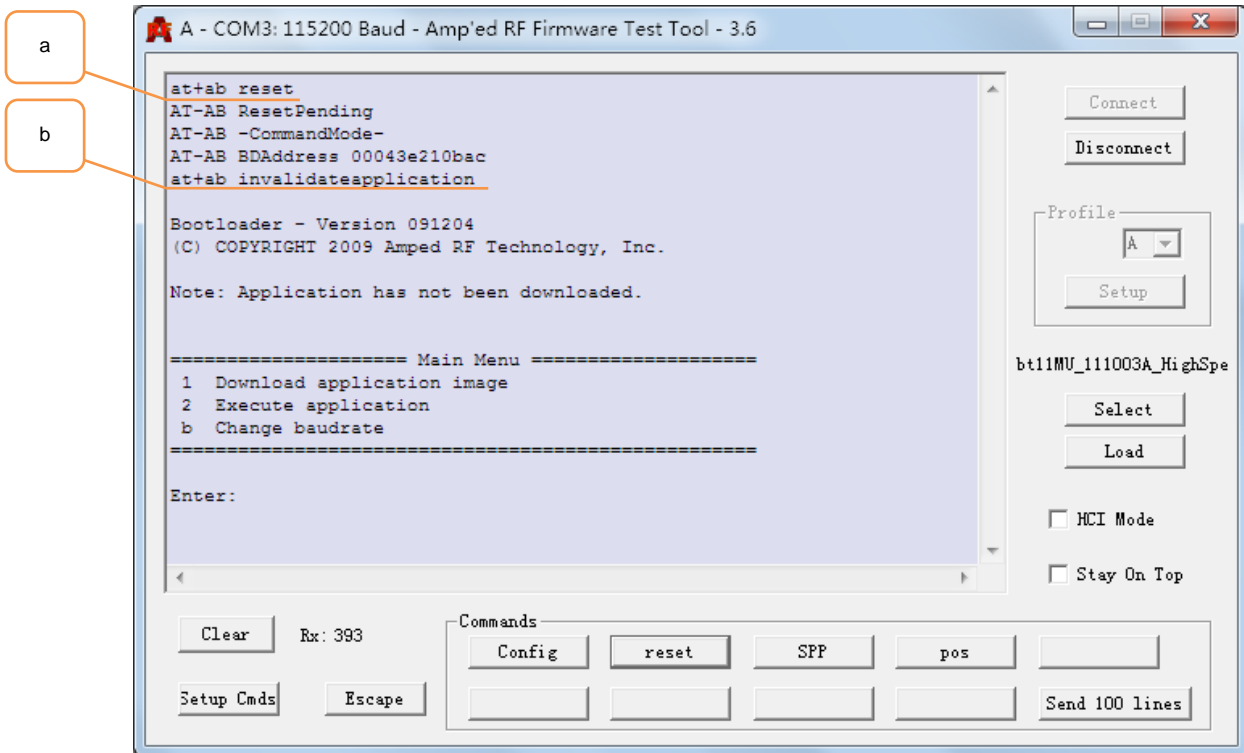

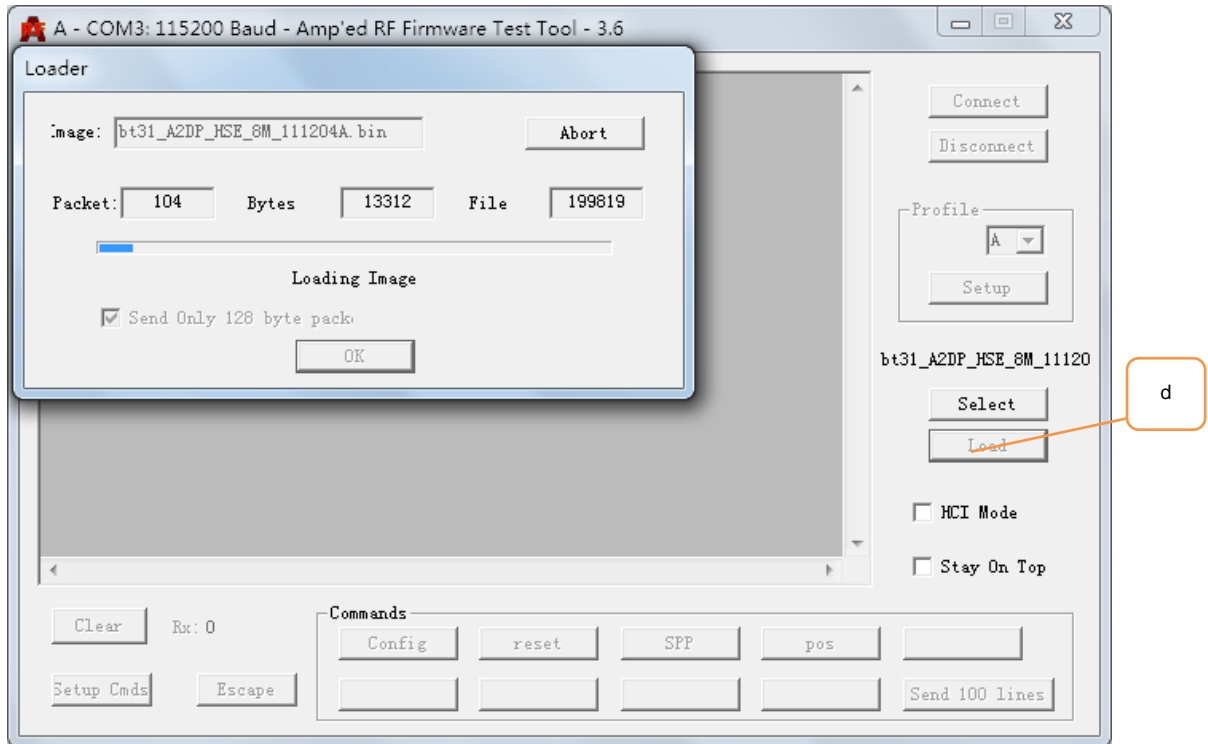


4. The Connections of Analog Audio Input or Output

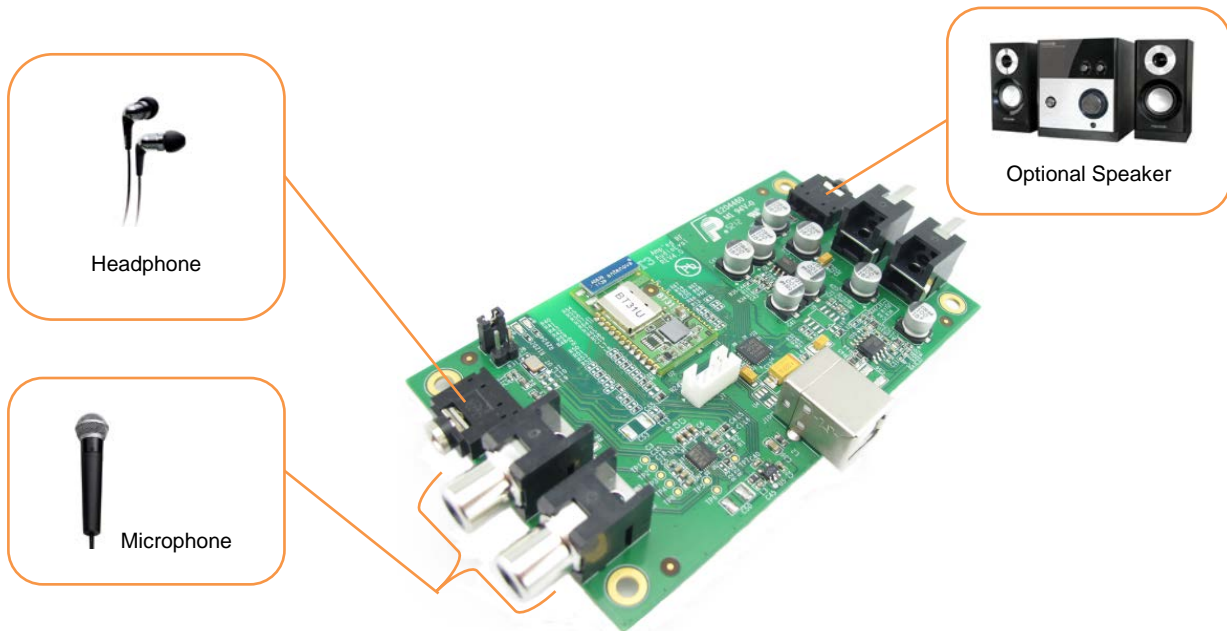

5. Bluetooth Connection and Music Play

- a. Establish the connection from iOS device with “BT Radio”.

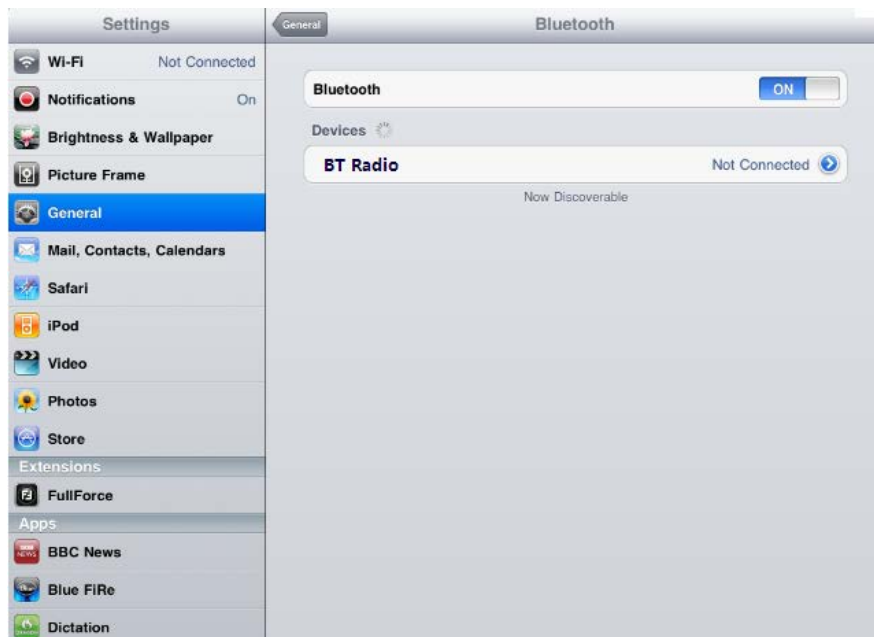

- b. Play music

