

Fast Track Your Wireless Project 自由无线 放飞梦想

BT-P0S8800-M Installation Guide



How to Install the BT-POS8800-M into a ViVOPay 8800 Reader

1) Open the back cover, remove the stylus, and cut off the bracket shown in a figure1 with a red block



Figure 1. Remove stylus and cut bracket

Phone: +1 408 213-9530 | Fax: 408-213-9533 | E-mail: <u>info@ampedrftech.com</u>

Address: 1879 Lundy Ave, ste. 138, San Jose, CA 95131

电话: +86 022-83945100 | 传真: +86 022-83945100 转 111 | E-mail: <u>infocn@ampedrftech.com</u>



2) Observe the result in figure 2.



Figure 2. Bracket removed

3) Connect the power and data cables from the BT-POS8800-M to the ViVOPay reader.

Phone: +1 408 213-9530 | Fax: 408-213-9533 | E-mail: <u>info@ampedrftech.com</u>

Address: 1879 Lundy Ave, ste. 138, San Jose, CA 95131

电话: +86 022-83945100 | 传真: +86 022-83945100 转 111 | E-mail: <u>infocn@ampedrftech.com</u>



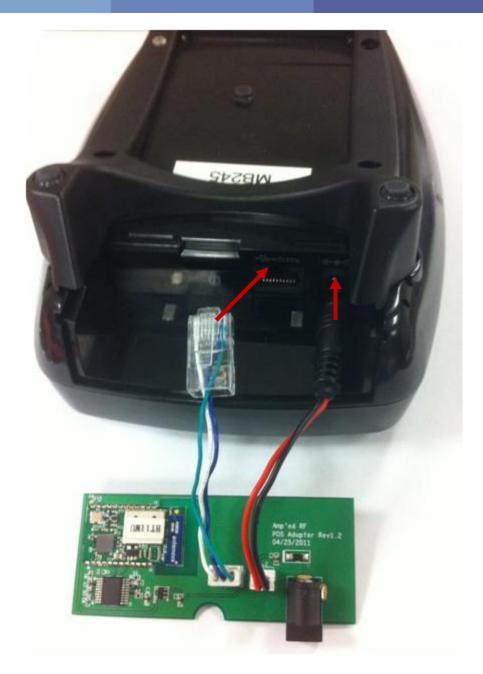


Figure 3. Power and data cable connections

Phone: +1 408 213-9530 | Fax: 408-213-9533 | E-mail: <u>info@ampedrftech.com</u>

Address: 1879 Lundy Ave, ste. 138, San Jose, CA 95131 电话: +86 022-83945100 | 传真: +86 022-83945100 转111 | E-mail: <u>infocn@ampedrftech.com</u>



4) Arrange the BT-POS8800-M Adapter and put power cable as shown in figure 4.



Figure 4. Arrangement of BT-POS8800-M Adapter and cables

Phone: +1 408 213-9530 | Fax: 408-213-9533 | E-mail: <u>info@ampedrftech.com</u>

Address: 1879 Lundy Ave, ste. 138, San Jose, CA 95131 电话: +86 022-83945100 | 传真: +86 022-83945100 转 111 | E-mail: <u>infocn@ampedrftech.com</u>



5) Install back cover on as per figure 5.



Figure 5. Put back cover

6) Plug in with the power cable to turn on the ViVOPay reader.



Phone: +1 408 213-9530 | Fax: 408-213-9533 | E-mail: <u>info@ampedrftech.com</u>

Address: 1879 Lundy Ave, ste. 138, San Jose, CA 95131 电话: +86 022-83945100 | 传真: +86 022-83945100 转 111 | E-mail: <u>infocn@ampedrftech.com</u>